

---

# HD Sports Camera

## User Manual

---



**Box contents:**



1 x HD Sports Camera



1 x Waterproof Case



1 x Handlebar Mount



1 x Suction Cup Mount



1 x Helmet Mount  
with Strap



1 x Universal Tripod  
Mount



1 x USB Cable

 


1 x 12V Charging Cable


### MOTO/BIKE SPORT EDITION



### HELMET EDITION

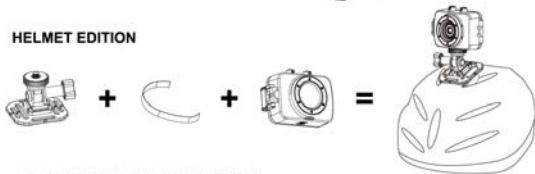

### CAR DRIVING RECORDER EDITION

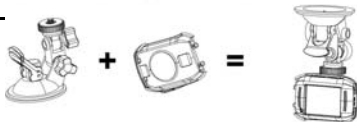 

- 
- ◆ Do not expose the video camera to sunshine directly, nor point its lens to sunlight. Otherwise, the image sensor of the video camera may be damaged.
  - ◆ Take good care of the video camera and prevent water or sand particles from entering the video camera when it is used on the beach or water, because water, sand particles, dust or component containing salt may damage the video camera.
  - ◆ Keep the video camera contaminated free of dust and chemical materials. Place it in a cool, dry and well

ventilated place. Do not place the video camera in a high temperature, moist or dusty place.

- ◆ Please check if the video camera can operate normally before use.
- ◆ If dirt or stain is accumulated on the video camera or on its lens, use soft, clean and dry rag to wipe it away gently. If the video camera or its lens is stained with sand particles, blow them away gently. Do not use cloth to wipe arbitrarily. Otherwise, it may scratch the surface of video camera or its lens.
- ◆ If it is required to clean camera surface, firstly blow away the sand dust accumulated on this surface, and then wipe the camera gently with rag or tissue applicable to optical equipments. Please use the cleaning agent of video camera for wiping if necessary. Do not use organic solvent to clean the video camera.

- ◆ Do not touch the lens surface with fingers.
- ◆ Please back up the data if the memory card inside this video camera is used for the first time.
- ◆ The externally installed memory-cards are manufactured from precise electronic components. Data may be lost or damaged under the following circumstances:
  1. Improper use of the memory card.
  2. The memory card is bent, dropped or damaged.
  3. Place it under high temperature or moist environment or expose to sunshine directly.
  4. Electrostatic or electromagnetic field exists around the memory card.

5. This memory card is taken out or power supply is interrupted when this video camera or computer is connected to the memory card (i.e. during reading, writing and formatting).
6. Touch the metal contact surface of the memory card with fingers or metal materials.

## System Requirements


---

PC System Requirements	
<b>Operating System</b>	Microsoft Windows2000, XP, Vista, 7
<b>CPU</b>	Intel Pentium III of more than 800MHz or other CPU with equivalent performance
<b>Internal Memory</b>	Larger than 512MB
<b>Sound Card and Display Card</b>	The sound card and display card shall support DirectX8 or higher version.
<b>CD Driver</b>	Speed of 4 times or faster
<b>Hard Disk</b>	Free space of more than 500MB

<b>Others</b>	One standard USB1.1 or USB2.0 port
---------------	------------------------------------



 Diagram:

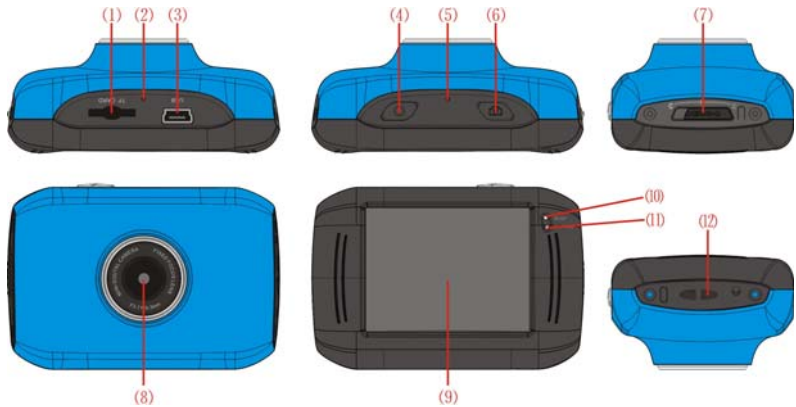

- 1 Micro SD Card slot
- 2 Reset
- 3 USB input
- 4 Power button
- 5 MIC
- 6 Shutter button
- 7 Mode Switch:

- 8 Lens
- 9 Touch Screen LCD
- 10 Working Indicator Light
- 11 Indicator Light for charging
- 12 Wrist strap insert (wrist strap not included)

## Usage

---

### 1. Charging the built-in lithium battery



## USB Cable

Connect the video camera with computer for charging in the shutdown state. The indicator light for charging is on at this time and will be off after charging. In general, it can be fully charged after 2-4 hours.

## 2. Use of a MicroSD card

 
1. Push the memory card into the card slot according to the concave lettering beside the slot of memory card till it is completely inserted.
2. To take out the micro SD card(not included), gently press the end of the memory card inward and it will pop up.



**Note: Make sure to insert a micro SD card (not included) before using.**

### **3. Startup/Shutdown**

3.1 Startup: Press the POWER button for 3 seconds, the screen is displayed and the camera is on.

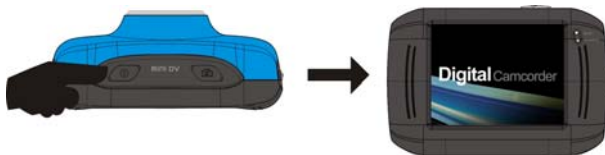

3.2. Shutdown: Press the POWER Key, and the camera will be shut down. .

Automatic shutdown: when the idle time of the video camera reaches the time for automatic shutdown, it will be shut down automatically to save power. The default time of this camera for automatic shutdown is 5 minutes.

- 3.3. Shutdown in case of power shortage: when the power of the battery is insufficient, the LCD display screen will display the low power icon. Please charge it in time. When indicate light turns red and flickering, the video camera will be shut down automatically.



#### **4. Conversion between Function Modes**



 
Three modes are available for this video camera, i.e. picture taking mode, video recording mode and vehicle-mounted mode. Conversion is available via the mode switch after startup.

Picture taking mode: pictures can be taken;

Video recording mode: video can be recorded;

Vehicle-mounted mode: video can be recorded.

(one section every 5 m

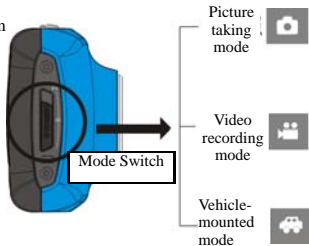

## 5. **Indicator light**

**Busy light:** when the camera is busy (such as, recording a film, taking photos, automatic off-screen), the busy light will be on.

**Charging light:** when the light is on for a long time, it prompts the user that the camera is charging.

## 6. Video recording mode

When the mode switch is turned to video recording mode, press the shutter button once or click the LCD center once to begin recording under previewing state; press the shutter button once again if you want to stop recording, and the camera will also stop recording, automatically when the memory card is full or the power is insufficient.

1 **00:12:18**: Timer means that video recording can still last for 12 minutes and 18 seconds.



2 : mode icon, represents that the video camera is in video recording mode.



3 : videoing size, clicks this icon and you can choose 720P/VGA.



4 : means that the memory card is inserted at present.

 


5 : digital zoom icon, click it and enlarge it.



6 : digital zoom icon, click and minimize it.

7 : visual shutter, touch this visible frame for taking photos or recording.



8 : battery icon, represents the power status of the battery.



9 : represents the status of digital zoom.

10 : click this icon to switch to the playback mode.



## 7 Picture taking mode:

Switch the mode switch into the Picture taking mode, press the shutter button or click the LCD center once under the previewing state to take a photo:

1 **0/1234**: Counter, indicating current number of photos taken already /number of photos to be taken.



2 : mode icon, indicating that the camera is in photo taking mode.

3 : video size, click this icon to select the photo resolution.



 
4 : means that the memory is been inserted at present.




5 : digital zoom icon, click it to enlarge.



6 : digital zoom icon, click it to minimize.

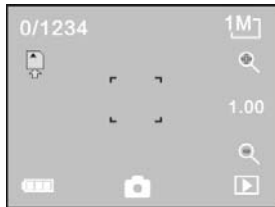

 7 : visual shutter, touch this visible frame for taking photos or recording.



8 : battery icon, indicates the power status of the battery.



9 : represents the status of digital zoom.

10 : click this icon to switch to the playback mode.





## 8. Vehicle-mounted mode:

Turn the mode switch to vehicle-mounted mode, press the shutter button or click the LCD centre once under the preview state to begin recording, save a segment for recording every 5 minutes, then start to record the next segment of video. When the storage card is full, the earliest segment of video will be deleted to release the corresponding space for continuous recording.

1 00:12:18 timer, indicating that the camera can still record for 12 minutes and 18 seconds.

2 : mode icon, representing that the camera is in vehicle-mounted mode.






3 : video size, click this icon to select 720P, VGA.

4 : represents that the memory card has been inserted .



5 : digital zoom icon, click it to enlarge.

6 : digital zoom icon, click it to minify.

7 : visual shutter, touch this visible frame for ta  photos or recording.





8 : battery icon, representing the current power status of the battery.

9 : represents the status of digital zoom.



10 : click this icon to switch into the playback mode.

**Note: the screen will be off automatically during recording process in order to save power; user can**

press the power button shortly to start the screen and restore the display.

## 9 Playback mode:



9.1 After starting up and entering the previewing state, click the playback icon () at the lower right corner of the LCD to switch to the playback mode:

Click

1 : represents that the current file is an AVI video file.



1/1

2 : represents that there is one file in the current folder/one file in total.

100

3 : current folder name (such as: I:\DCIM\100MEDIA

I: is the removable disk drive of the device).

4 : Means that clicking can select files frontwards.

>



5 : Means that clicking can select files backwards.

6 : Means that clicking can activate to confirm the deletion of the current file picture.



7 : Means that clicking can play the current movie clips.

8 : Means that clicking can switch back to the previous photo mode (video mode).



## 9.2 Playing Video Files:





Click to pause the video, click to play forward, and click to play backward.

### 9.3 File deletion:





Click YES to delete the current file immediately, or click NO to cancel the request of deletion.

## **Connecting to PC:**

Connect the device to the computer using the USB cable, then it will act as a removable hard disk drive.

Note: This device is plug & play, does not require any drivers.

The Icon of the removable disk drive will appear in the window of “my computer”. Photos/videos you have taken are saved in folder I:\DCIM\100MEDIA (I is the removable disk of this device) in the removable disk drive. Files recorded in vehicle-mounted mode are saved in I:\DCIM\RECORDER.

Note: the letter I drive is just an example, depending on your drives allocated to your computer already it may be already taken up.

## Specifications:

Image sensor	1.3 mega pixels (CMOS)	
Modes	Video Recording, takes photos, removable disk drive, Webcam	
Camera lens	F3.1 f=9.3mm	
Digital Zoom	4x	
Shutter	Electronic shutter	
LCD display screen	2.0" touch screen	
Image resolution	5M (2592×1944), 3M (2048×1536), 1M(1280×1024)	
Video resolution	VGA: 640x480 (60 fps), 720P:1280x720 (30 fps)	
White balance	Automatic	
Exposure	Automatic	
File formats	Images	JPEG

	Video	AVI
Storage	Supports up to 32GB microSD cards (without built-in flash memory)	
USB interface	High-speed USB 2.0 interface	
Power Supply	Built-in 3.7V rechargeable lithium battery	
Dimensions (length × width × height)	67(L) x 47(W) x 29(mm)	
Battery Life	Up to 80 minutes on a full charge	