

MB3551 Instructions

Introduction:

MB3551 is a new battery charger with individual charging channels. 10 channels are for AA/AAA sized batteries while 2 channels are for 9V batteries. Discharge function is equipped which can preserve the batteries from memory effect. It incorporates V detection, safety timer function and discharge function.

Instruction:

1. Read instruction before charging your battery.
2. Insert battery(ies) into the charger.
3. Insert the charger into AC or DC outlet. The LEDs light according to different battery voltage.

For AA/AAA:

LED

Fast Charge: Red

Discharge: Flashing Red & Green

Trickle Charge: Green

For 9V:

LED

Fast Charge: Red

Trickle Charge: Green

1. After 2 seconds, the LED lights in red indicating that charging is in progress.
2. When battery is full or the predetermined charging time (15 hours, which is controlled by the safety timer function) is over, the charger will switch to trickle charge mode, the red LED turns to green.
3. Press the discharge button for several seconds to activate the discharge process. The LED flashes Green & Red. When press the button several seconds again, the charger will switch to charging mode automatically.
4. Disconnect the charger from AC or DC mains.
5. Remove the batteries from the charger.
6. It is recommended to charge batteries of same capacity and same brand in each charging process.

Warning:

1. For indoor use only.
2. Do not charge non-rechargeable batteries.
3. The appliance is not intended for use by children or infirm persons without supervision.
4. The battery should be disposed of safely.
5. Batteries should not be thrown into household waste, open fire or waters.

Technical Specification:

Input Voltage: 100-240V AC, 60-50Hz

12V DC

Charge Current: 10x (1.4250mA) AA/AAA

2x (9.0V30mA) 9V