



QC-8079

4K ULTRA-HD CAMERA WITH WI-FI



User Manual

Never miss a detail with Ultra-HD 4K video capture! Using the included waterproof case (rated down to 30m underwater) you can capture stunning video just about wherever you like! Want more information?

Visit <http://movii.com.au/alphastream>



WARNINGS

- Handle it with care - do not drop the camera.
 - Do not expose the camera to strong magnetic objects, such as magnets and electrical motors. Strong magnetic fields may cause the camera to breakdown or cause image/sound damage.
 - Avoid exposing the camera to strong radio waves.
 - Never expose the unit to high temperatures, or direct sunlight for prolonged periods.
 - Always choose branded microSD cards for use with this camera. Generic cards may impair performance and cause record/playback issues.
 - Do not place microSD cards near strong magnetic objects to avoid data loss.
 - In the case of overheating, smoke, or an unpleasant smell in the process of charging, unplug your device immediately to prevent a fire hazard.
 - While the unit is charging, keep the product out of the reach of children. The charging cord may present an accidental choking/suffocation or electric shock hazard for children.
 - Store the unit in a cool, dry and dust-proof place.
- 
- 



PRODUCT FEATURES

- Water-resistant casing (up to 30m)
- Colour LCD for video & photo playback
- HD wide angle lens
- HDMI output
- Web camera
- Records videos while charging
- iOS/Android Control
- Supports storage cards up to 64GB maximum
- Multiple video recording formats: 4k, and 1080p
- Supports MP4 recording format
- Multiple photo shooting modes: single shot, self-timer (2s, 5s & 10s) and continuous
- Video encryption enabled
- Super lightweight and compact
- Replaceable battery

OPERATION







Inserting a microSD card

Please choose a branded microSD card as neutral cards are not guaranteed to work normally. Format it on your computer before use. Insert the card into the card slot on the right side of the camera.

Installing and removing batteries



The camera comes with a 3.8V Li-ion battery included. The battery compartment is located on the left side of the camera. To replace the battery, slide the release lever and the battery compartment cover will pop up slightly. Remove the cover and lift the battery pull tab. Carefully remove the battery from the compartment. Place a new battery in the compartment and replace the cover.

Charging your camera

You can charge your camera by connecting it to your computer. The charging indicator will be illuminated when charging and off when the battery is fully charged. Generally the battery will be fully charged after 2-4 hours.

Turning your camera ON/OFF


Press the POWER/MODE button for 3-5secs to turn the camera on and off. Camera will power off automatically when not in use after some time.



Switching between modes

Switch between video recording, photo shooting, slow motion, timer, playback and the menu by pressing the POWER/MODE button until you reach the desired mode.


Recording video

Switch to video recording mode. A video icon  will appear in the upper left corner of the screen. Press the Shutter button on the top of the camera to start recording. Press the Shutter button to stop recording.



Taking photos





Switch to photo shooting mode. A camera icon  will appear in the upper left corner of the screen. Press the Shutter button to take photos.

Exporting video/photos

Switch to playback mode. After you are finished recording, connect the camera to your computer via the USB cable included and export your photos/videos to your computer. Alternatively, you can remove the microSD card from the camera and export the photos/video to you computer using a card reader.




Camera Wi-Fi App

1. On your iPhone® or iPad® go to the App Store. Search for “Dechitech” and download the Dechitech app.
 2. Turn on your camera and navigate to menu mode. Select “Wi-Fi” from the menu. The SSID and WPA2 password for the camera’s Wi-Fi signal will show on the screen.
 3. On your iPhone® or iPad®, go to Settings > Wi-Fi. Select the SSID and enter the WPA2 password (1234567890) showing on your camera screen. Enter the WPA2 password showing on your camera’s screen.
 4. Open the Dechitech app and select the SSID from the menu to connect.
 5. You now have full remote control over your camera from your iPhone® or iPad®. You can take photos, video and slow motion footage using your device as the remote control, as well as store media for offline playback.
- 
- 

Time-lapse mode

Switch to time-lapse mode by pressing the POWER/MODE button until you reach menu mode.

Press the OK button to select menu mode. Using the up and down arrow buttons on the side of the camera, navigate to the “time-lapse” menu selection and select a timing (1s/2s/5s/10s/30s/60s).

Press the OK button and navigate back to video mode. A timer icon  will appear at the bottom left corner of the screen.

Press the OK button and the camera will then automatically take photos at the timing you have selected. You can then compile the photos into a time-lapse on your computer after exporting.

To turn off time-lapse mode, navigate back to the menu and select “close”.

SPECIFICATIONS

LCD	2.0 inch
Video Resolution	4k: 4096 x 2160 @ 30fps 1080p: 1920 x 1080 @ 120fps or 60fps
Video Sound	ON/OFF
Time-lapse	OFF/1S/2S/5S/10S/30S/60S
Loop Recording	OFF/1mins/2mins/3mins/5mins
Language Options	English/French/Spanish/ Italian & Dutch/Chinese Traditional & Simplified/Japanese/Russian
Video Format	MP4 (H.264 Compressed)
Photo Resolution	16 megapixel
Storage	MicroSD up to 64GB (Class 10) Note: 4K recording requires a minimum UHI-U3 microSD card
Shooting Mode	Single Shot, Self-timer (1s/2s/5s/10s/30s/60s) & Continuous
USB Interface	USB 2.0
Power Source Interface	3.7V
Battery Capacity	1000mAh
Battery Life	Up to 110 minutes
Charging Time	3hrs (approx.)

SPECIFICATIONS (CONTINUED)

Operating System (OS)	Windows XP/Vista or above, Win7/8/10 & Mac OS
Dimensions	60(W) x 41(H) x 30(H)mm (including lens)

SET-UP OPTIONS



BOX CONTENTS



HD Camera



Waterproof Case



Shield Case



Helmet Mount



Suction Cup Mount



Handle Bar Mount



Remote Control



Car Charger



USB Cable



Mount Joiner



Adhesive Base Plates



Helmet Straps



Safety Cable



Cable Ties



Anti Fog



DISTRIBUTED BY:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com
Made in China

