

RESPONSE

User Manual

12/24V MP3 FM Modulator with Remote AR-3136



Features:

- Backlit LCD
- USB and SD Card Compatible
- Supports file folders
- Fully adjustable arm for multi-angle viewing
- Wireless full function remote control

Specifications:

- Accepts SD/MMC, USB or AUX input
- FM Frequency: 87.5 to 108MHz
- 12V - 24VDC Input
- Includes infrared remote control
- Dimensions: 130(L) x 40(W) x 25(H) mm

Using the FM Transmitter:

- Insert the FM transmitter into your vehicle's cigarette lighter or power port.
- Tune your radio to an unused FM frequency, then match the same frequency on the FM transmitter by using the buttons on the device, or the remote control supplied.
- Plug a USB or SD card with MP3 files into the device. Music will play and be transmitted through your stereo, and can be controlled by the remote control. Alternatively you can connect an MP3 player, i.e. iPod, Smartphone, etc, to the AUX input for music playback (when connected via AUX, the music is controlled by the MP3 player).

Using the Device:

Operation Guide	FM transmitter	Remote Controller
Playing and Stopping the Music	<p>Press 'PLAY/STOP' Button: Plays the music</p> <p>Press 'PLAY/STOP' Button again: Stops the music</p>	Press PLAY/PAUSE Button
Adjusting the Volume	<p>Press and Hold "▶▶" button: Increase the Volume</p> <p>Press and Hold "◀◀" Button: Decrease the Volume</p>	<p>Press "VOL+": Increase the Volume</p> <p>Press "VOL-": Decrease the Volume</p>
Changing the Frequency	<p>Press "B+": Increase the frequency</p> <p>Press "A-": decrease the frequency</p>	<p>Press "CH+" button: Increase by 0.1MHZ</p> <p>Press "CH-" button: Reduce by 0.1MHZ</p> <p>OR press the number of the frequency that you want from the remote and press "CH" to confirm</p>
Choosing Music	<p>Press "▶▶" Button: Play the next song</p> <p>Press "◀◀" Button: Play the previous song;</p>	<p>Press "NEXT" Button: Play the next song</p> <p>Press "PREV" Button: Play the previous song</p> <p>OR press the number of the song you want from the remote</p>
Setting the EQ	Not Supported – Only from remote control	Press "EQ" button to switch the EQ
Changing the Replay Mode	Press and Hold "PLAY/STOP" button; four replay modes selectable: Folder, Single, Random, All	Not Supported – Only from the FM Transmitter
Switching Folders	Not Supported – Only from the remote control	Press "Folder+" or "Folder -"

NOTE: Controls can only control when playing MP3 files off an SD/MMC or USB.

NOTE:

- Keep the unit and remote control away from any liquid, dust, or heat source.
- Never attempt to open, repair or modify any part of the unit.
- When in storage, ensure to remove the batteries from the remote control.

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com