



AHD to HDMI Converter




User Manual

AC-1778

Box Contents:

- 1 x AHD to HDMI Converter
- 1 x Mains Power Adaptor

Connection Diagram:

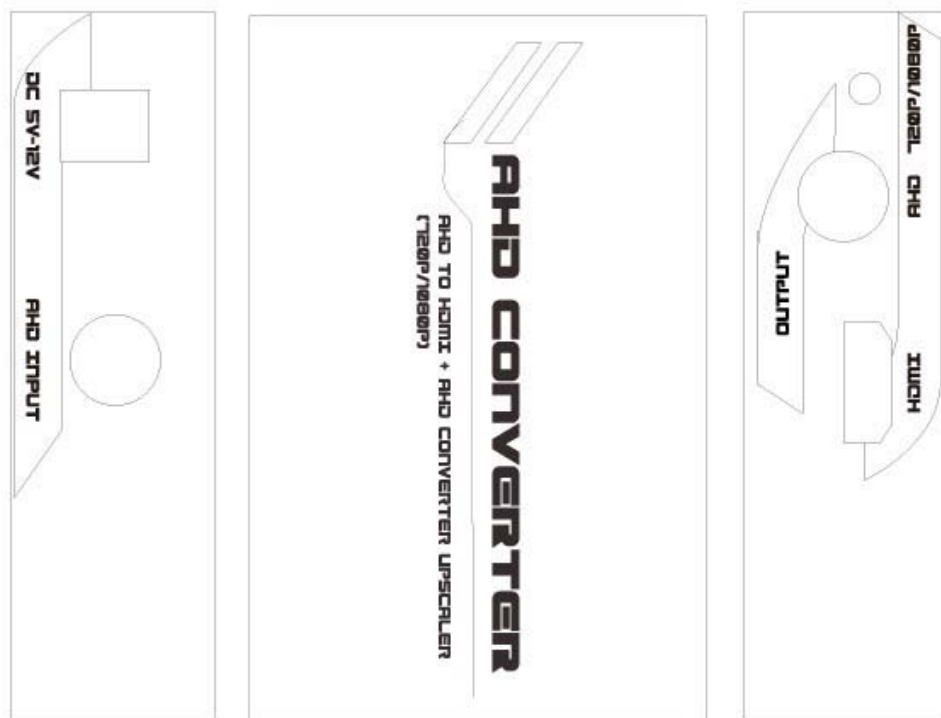

- 1 x BNC Input (AHD)
- 1 x 5VDC Power Socket
- 1 x HDMI Output
- 1 x BNC Output (AHD)
- 1 x 720/1080p Resolution Button

Connection Diagram:



1. Connect the AHD camera to the BNC input of the converter.
2. Connect the HDMI output to a HDMI display such as a monitor, TV or projector.
3. If necessary for DVR loop through, connect the BNC output to a supported AHD DVR.
4. Once all devices are powered up, you will be able to view the cameras image on the display.

Specifications:

Inputs: 1 x BNC (AHD)

Outputs: 1 x HDMI

1 x BNC (AHD)

AHD Input Resolution: 1080p @ 30Hz

720p @ 60/50/30Hz

AHD Output Resolution: 1080p @ 30Hz

720p @ 60/50/30Hz

HDMI Resolution: 1080p @ 60Hz, 720p @ 60Hz

AHD Cable Distance: Up to 500m

Power Supply: 5VDC, 1A

Power Input: 5V-12VDC, 1A

Power Consumption: 5W

Dimensions: 90(W) x 58(D) x 26(H)mm

Distributed by:

TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com