

Error Codes

MB3613		Solution
Battery failed	Er2	Check the battery voltage is for 12V system
Reverse polarity protection	Er1 + Red LED light on	Remove the reverse, unplug immediately from mains, connect the red clamp to positive (+) battery post, and black clamp to negative (-) post.
Failed in pre- charge stage	Er3	Check battery specification,12V battery use 12V mode; 24V battery use 24V mode. If still doesn't work,replace with new battery
Failed in Analysis stage	Er4	Battery has problem. Replace with a new battery and try again.
Failed in Desulphation stage	Er5	Battery is too old or damaged. Replace with new battery and try again.
Battery failed or damaged	The buzzer flashes five times and the red light flashes	Check the battery voltage is for 12V system